

## Greenstar Heatslave II

EXT 25/32 2022+

7731600265

To the extent applicable to the product, the following data are based on the requirements of Regulations (EU) 811/2013 and (EU) 813/2013.

Productdata	Symbol	Unit	7731600265
Declared load profile			XL
Energy Efficiency Class			A
Water heating energy efficiency class			B
Rated heat output	Prated	kW	32
Annual energy consumption (average climate conditions)	Q <sub>HE</sub>	kWh	-
Annual energy consumption	Q <sub>HE</sub>	GJ	103
Annual electricity consumption	AEC	kWh	44
Annual fuel consumption	AFC	GJ	26
Seasonal space heating energy efficiency	η <sub>s</sub>	%	92
Water heating energy efficiency	η <sub>wh</sub>	%	64
Sound power level, indoors	L <sub>WA</sub>	dB	-
Indication about ability working only during off-peak hours			No
Special precautions to be taken during assembly, installation or maintenance (if applicable): see product accompanying documents			
Condensing boiler			Yes
Low temperature boiler			No
B1 boiler			No
Cogeneration space heater			No
Combination heater			Yes
<b>Useful heat output</b>			
At rated heat output and high temperature regime	P <sub>4</sub>	kW	32,90
At 30 % of rated heat output and low temperature regime	P <sub>1</sub>	kW	10,00
<b>Useful efficiency</b>			
At rated heat output and high temperature regime	η <sub>4</sub>	%	91,5
At 30 % of rated heat output and low temperature regime	η <sub>1</sub>	%	97,3
<b>Auxiliary electricity consumption</b>			
At full load	e <sub>lmax</sub>	kW	0,150
At part load	e <sub>lmin</sub>	kW	0,047
In standby mode	P <sub>SB</sub>	kW	0,002
<b>Other items</b>			
Standby heat loss	P <sub>stby</sub>	kW	0,161
Ignition burner power consumption	P <sub>ign</sub>	kW	-
Emissions of nitrogen oxides (only gas- or oil fired)	NO <sub>x</sub>	mg/kWh	109
<b>Additional data for combination heaters</b>			
Daily electricity consumption (average climate conditions)	Q <sub>elec</sub>	kWh	0,199
Daily fuel consumption	Q <sub>fuel</sub>	kWh	32,426

Further important information for installation, maintenance as well as recycling and/or disposal are provided within the installation and operating manuals. Read and follow the installation and operating manuals.